



We put space to work.

Item # \_\_\_\_\_

Job \_\_\_\_\_

# myCart® Series

## Polymer Utility Cart

**User-Friendly:** Ergonomic handle and additional legroom puts more distance between the shelves and you. You can push the cart more freely without hitting your shins and feet against the cart.

**Convenient:** The utility tray is roomy enough to store every day objects. It offers 2x the amount of space than traditional utility carts; which allows for objects to fit in comfortably.

**Personalized:** Each cart comes with two labels for easy identification.

**Ultimate Cleanability:** Smooth polymer shelf surfaces with contoured edges are designed to resist staining and wipe clean easily.

**Corrosion-Proof Shelves:** All-polymer shelves will never corrode.

**Sturdy Construction:** Impact resistant shelves are designed to withstand daily abuse.

- Weight capacities evenly distributed:  
**MY1627 and MY2030 models:** 150lbs. (68kg) per shelf, not to exceed 300lb (136kg) on a 2-shelf cart and 400 lb. (181kg) on a 3-shelf cart.

**MY2636 Models:** 200lbs. (90kg) per shelf, not to exceed 400 lb. (181kg) on a 2-shelf cart and 500 lbs. (227kg) on a 3-shelf cart.

- Contains Spills: 7/16" (11mm) ship's edge retains small spills and prevents items from sliding off during transport.
- Microban® product protection: Blue myCart only has built in Microban product protection. This inhibits the growth of bacteria, mold, mildew, and fungi that cause odors, stains, and product degradation.
- 2-tier and 3-tier models available
- Easy-to-Adjust: Optional center shelf adjusts on 1" (25mm) increments.
- **myCart® Plus Models:**
  - 5 levels of top shelf adjustment allow operators to align top shelf with worksurfaces to easily slide items on and off cart.
  - Top shelf handle adjustment provides taller users improved ergonomics when moving carts.
  - Storage area increases 4" (102mm) to store and transport larger items.
- Easy, No-Tool Assembly: Ships knocked down.



**PLUS  
MODELS  
CAN ADD UP TO 4"  
(102mm) IN HEIGHT**



**Easy  
& Useful**

Easy-grip handle  
and roomy  
utility tray



AVAILABLE  
COLORS



Blue



with Microban antimicrobial product protection

All Metro Catalog Sheets are available on our website: [www.metro.com](http://www.metro.com)



**50%  
more  
legroom**

You won't  
hit your shins  
or kick the  
cart!



myCart® Series Polymer Utility Cart

**12.29**



**InterMetro Industries Corporation**  
North Washington Street, Wilkes-Barre, PA 18705

Product Information. U.S. and Canada: 1.800.992.1776  
Outside U.S. and Canada: [www.metro.com/contactus](http://www.metro.com/contactus)

Printed in U.S.A. L02-258 7/22

Information and specifications are subject to change without notice. Please confirm at time of order.

Copyright © 2022 InterMetro Industries Corp.



# Short Form Specs



## Base Models:

### Carts:

- Consists of at least 2 high-density polyethylene, injection-molded shelves and 4 chrome-plated posts. Handle has an integrated utility tray with a base width of 1.8-2.2" (46-56mm) and covered corners. Flat shelf has a built in 3" (76mm) cutaway. All shelves have a built-in 7/16" (11mm) deep ship's edge around the perimeter. Cart includes two nominal 4.625" L x .88" H (117.475 x 22.352mm) labels for easy identification.
- 1627 and 2030 models: Roll on four 4" (102mm) diameter thermoplastic, mark-resistant swivel/stem casters.
- 2636 models: Roll on four 5" (127mm) diameter thermoplastic, mark-resistant swivel/stem casters.

### Construction:

- Continuous Usage Temperature: -20/120°F (-29/49°C)
- Carts are not intended for cart wash applications
- Casters:
  - 4" (102mm) swivel caster: Thermoplastic, non-marking gray tread. Plated horn and axle. Replacement part: RPBC4M-4, bag of four.
  - 5" (127mm) swivel caster: Resilient rubber material, plated horn and axle. Replacement part: 5M, sold individually.

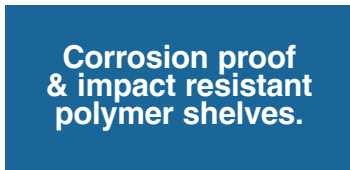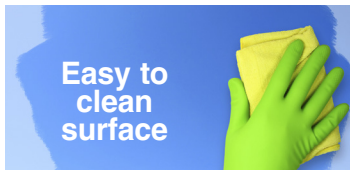

### myCart Series®

Width/Length/Height		Description	Load Rating Per Cart		Gray	Black	Blue	Purple
(in.)	(mm)		(lbs.)	(kg)	Cat. No. Gray	Cat. No. Black	Cat. No. Blue Microban	Cat. No. Purple
18.312x31.5x35.5	465x800x902	2-shelf	300	136	MY1627-24G	MY1627-24BL	MY1627-24BU	—
18.312x31.5x35.5	465x800x902	3-shelf	400	181	MY1627-34G	MY1627-34BL	MY1627-34BU	—
23.88x34.38x35.5	595x873x902	2-shelf	300	136	MY2030-24G	MY2030-24BL	MY2030-24BU	MY2030-24AP
23.88x34.38x35.5	595x873x902	3-shelf	400	181	MY2030-34G	MY2030-34BL	MY2030-34BU	MY2030-34AP
27.69x40.25x36.88	703x1022x937	2-shelf	400	181	MY2636-25G	MY2636-25BL	MY2636-25BU	—
27.69x40.25x36.88	703x1022x937	3-shelf	500	227	MY2636-35G	MY2636-35BL	MY2636-35BU	—




### myCart® Plus

Width/Length/Height		Description	Load Rating Per Cart		Black
(in.)	(mm)		(lbs.)	(kg)	Cat. No. Black
18.312x31.5x35.5-39.5	465x800x902-1004	2-shelf	300	136	MY1627-24BL-PL
18.312x31.5x35.5-39.5	465x800x902-1004	3-shelf	400	181	MY1627-34BL-PL
23.88x34.38x35.5-39.5	595x873x902-1004	2-shelf	300	136	MY2030-24BL-PL
23.88x34.38x35.5-39.5	595x873x902-1004	3-shelf	400	181	MY2030-34BL-PL
27.69x40.25x36.8-40.8	703x1022x937-1039	2-shelf	400	181	MY2636-25BL-PL
27.69x40.25x36.8-40.8	703x1022x937-1039	3-shelf	500	227	MY2636-35BL-PL





There's a size to fit you perfectly.

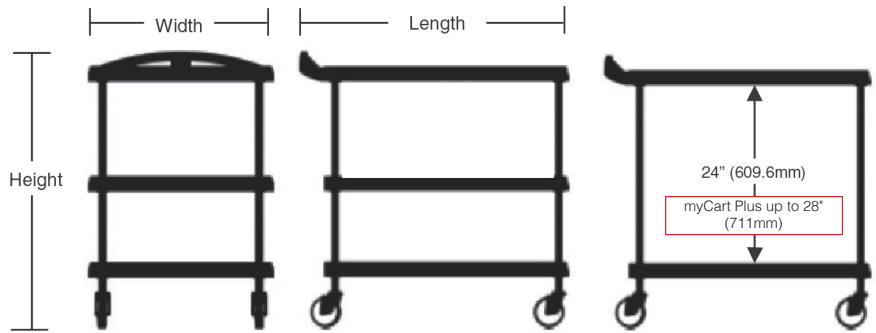

**PLUS**  
MODELS  
CAN ADD UP TO 4"  
IN HEIGHT






16x27

MY1627

**Easy-grip handle and utility tray**

- Small footprint for tight spaces.
- Accommodates Metro tote boxes and ISO totes.

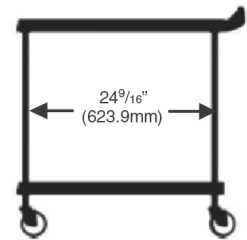
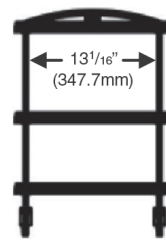


20x30

MY2030

**MY2030 cart handle has built-in recessed support channel to manage odd shaped items.**

- Right-sized to fit : Glass & dish racks, bussing totes, silverware bins, milk crates.


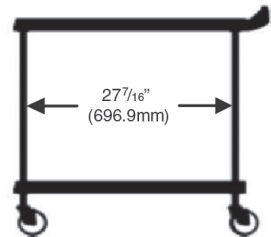
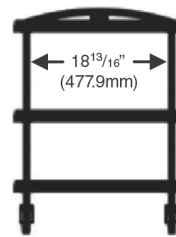


26x36

MY2636

**MY2636 cart handle has a built-in slot to hold scanners and labelers.**

- Ideal for large bulky items. 5" (127mm) Caster makes cart easier to maneuver. 3-shelf model holds up to 500 lbs.

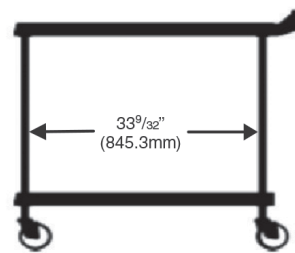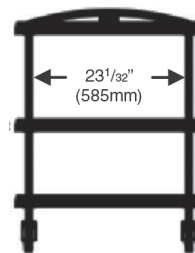




# myCart® Series Polymer Utility Cart

We put space to work.



Wastebasket and Holder

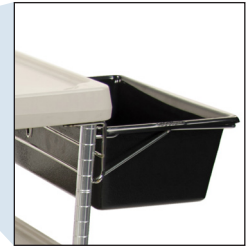

Utility Bin and Holder

## myCart Accessories

- Utility bin and wastebasket fit myCart models only. Not compatible with myCart Plus.

Width/Height/Depth		Description	Fits Cart	Load Rating		Approx. Pkd. Wt		Cat. No.
(in.)	(mm)			(lbs.)	(kg)	(lbs.)	(kg)	
17.88x16.25x14.75	454x413x375	Wastebasket + Holder	MY1627	25	11.3	5.7	2.5	<b>MYWB1</b>
23x16.25x14.75	584x413x375	Wastebasket + Holder	MY2030	25	11.3	5.8	2.6	<b>MYWB2</b>
14.38x15.38x10.38	365x391x264	Wastebasket Only				2.8	1.3	<b>MF222</b>
17.38x7x15.25	454x178x387	Utility Bin + Holder	MY1627	25	11.3	5	2.2	<b>MYUB1</b>
23x7x15.25	584x178x387	Utility Bin + Holder	MY2030	25	11.3	5.1	2.3	<b>MYUB2</b>
16.38x6x11	416x152x279	Utility Bin Only				2	0.9	<b>UB1</b>

### Personalization Labels

Personalization labels provide easy identification

- Constructed of polyester material with a clear polyester flap to protect written information from wiping off.

4.37"L x .875"H (117.5x22.4mm)

**Cat. No. MYCARTLBL-10PK** (Pack of 10)

### Replacement Casters

4" (102mm) non-marking swivel caster.

Used with MY1627 and MY2030 models.

**Cat. No. RPBC4M-4** (Bag of 4)

5" (127mm) swivel resilient rubber caster.

Used with MY2636 models.

**Cat. No. 5M** (sold individually)

medi<sup>+</sup>  
HEALTH

Tilaukset: [tilaukset@medihealth.fi](mailto:tilaukset@medihealth.fi) Tiedustelut: [info@medihealth.fi](mailto:info@medihealth.fi)  
Medihealth Oy, Haarasuonkuja 5 90240 Oulu, y-tunnus 3131118-6, [www.medihealth.fi](http://www.medihealth.fi)